

 
 
# RF Wireless LED Dimmer

Beulux Code: C94.92-4ZR



**Important:** Read All Instructions Prior to Installation

## Function introduction

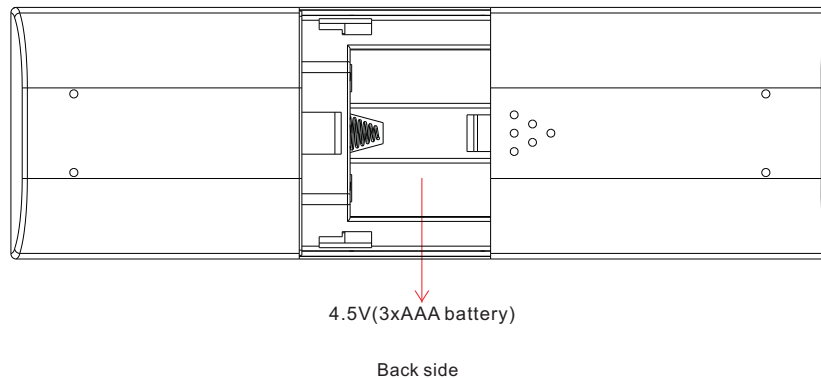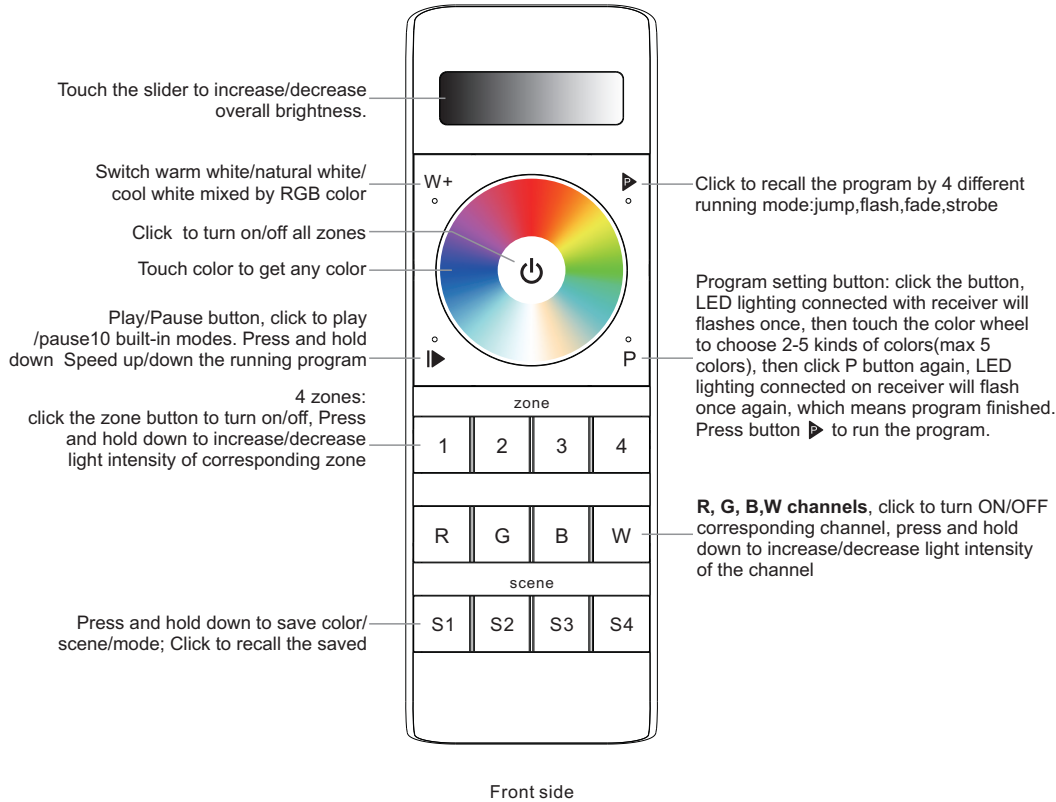

## Product Data

Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	4.5V(3xAAA battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	153x52x19mm

- Control 4 zones of RF receiver
- RGBW controller
- Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

## Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

## Operation

### Pair with RF receivers:

Turn on the remote → Click "Learning Key" on RF receiver → Click a zone number on RF remote → Touch the color wheel → LED lights connected with the RF receiver will flicker once

→ The receiver is paired with the remote successfully.

### Play the remote after pairing:

Turn on the remote → Click the paired zone number/numbers → Touch the color wheel or click other button to do the controlling

### Program the running mode :

Turn on the remote → Click the paired zone number/numbers → Click the button P, LED lighting connected with receiver will flashes once → Touch the color wheel to choose 2-5 kinds of colors (max 5 colors)


→ Click P button again, LED lighting connected on receiver will flash once again → Program finished. Press button ▶ to run the program → Program finished. Press button ▶ to switch 4 different running mode: **jump, flash, fade, strobe**

### How to delete the pairing:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

### If you use multiple receivers, you have two choices:

 Option 1: have all the receivers in the same zone, like zone 1

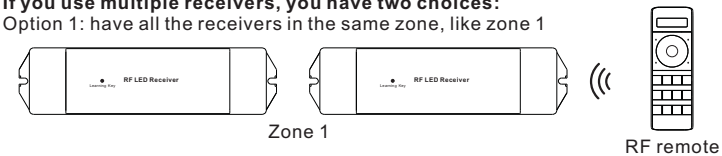

Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4

